

## Keys

### Electronic key



Smart access system with push-button start  
(→P10, 23)

\*: If equipped

### Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box
- Locks and unlocks the trunk storage extension

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door  
**Press twice:** unlocks all doors  
**Press and hold:** opens the windows and moon roof\*
- 3 Press and hold:** Opens the trunk  
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.
- 4 Press and hold:** sounds the alarm  
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

\*: If equipped

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 23.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp one of the door handles.

### ■ Exiting the vehicle



To lock the vehicle, press the lock button on one of the door handles.

To close the windows and the moon roof\*, press and hold the lock button.

\*: If equipped

### ■ Opening the trunk



To open the trunk, press the trunk release button.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 65.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

**To set the alarm:** close the doors, trunk and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** start the engine, or unlock the doors or trunk.

### Steering lock



The steering wheel locks when the "ENGINE START STOP" switch is turned OFF and the driver's door is opened.

When the steering lock cannot be released, the green indicator light on the "ENGINE START STOP" switch will flash and a message will be shown on the multi-information display. To release it, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch.